


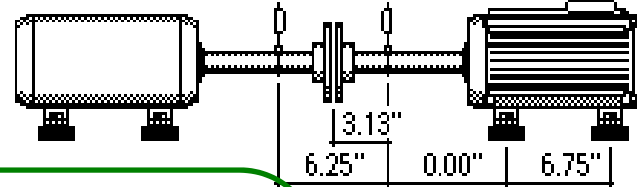


PUMP 101 FINAL 2008-10-09 16:15 32159 GO1.05



Angularity (top #) and offset (bottom #) in the vertical and horizontal directions. These indicate Alignment quality. Angularity in mils/inch and offset in mils at center of the coupling.

Tolerance Table

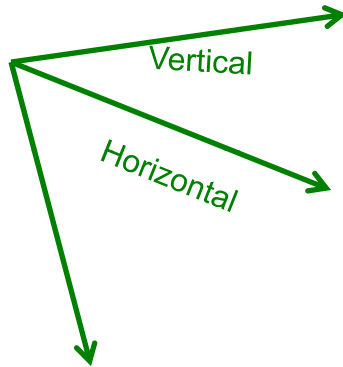

Vertical	Angularity	-0.5 /1"	-3	-6
	Offset	-1.3		
Horizontal	Angularity	-0.3 /1"	-1	-2
	Offset	+0.2		

Vertical and horizontal feet values. These are in mils at the feet. Used as a guide when making alignment moves. These do not determine alignment quality and should not be used as tolerances.

	Rpm	Angularity mils / 1"	Offset mils
▶	3600	0.5	2.0
▶	1800	0.7	4.0
▶	1200	1.0	6.0
▶	900	1.5	8.0
▶	<input type="text"/>	<input type="text"/>	<input type="text"/>
▶	<input type="text"/>	<input type="text"/>	<input type="text"/>
▶	<input type="text"/>	<input type="text"/>	<input type="text"/>

OK

1 mil = .001 inches = 1 thousandth

www.vibralign.com